BS₅	R	SPI DRAWN BY	ECIA MA	AL ENGIN	NEE	RINC	g in	ISTR		TIC -0002		6
		CHK'D. BY	G. Kle	ein	DATE	07/0	5/05	SHEET		1	OF	17
BS&B SAFETY SYSTE	MS, L.L.C.	APP. BY	D. Ibbe	etson	REVIS		Ν	RELEAS	E NO.	12-	T-0607	
REV.: S	ECN NO	.: 17-T	-0367	DRAWN: Kunaran	Ļ	CHK'D.:	(ĽB	DATE	2	22-Sep	-17

INSTALLATION INSTRUCTIONS FOR THE BUCKLING PIN RELIEF VALVE (BPRV)



US Patents 6,367,498; 6,488,044; 6,491,055 apply; International Patents Pending

Danger: BPRV's are intended to provide a pressure relief opening. The BPRV is designed to instantaneously open at a specified temperature and pressure, thereby relieving excess pressure or preventing excessive vacuum in a system.

IT IS IMPERATIVE THAT THIS BPRV BE PROPERLY INSTALLED AND SAFELY VENTED IN ORDER TO AVOID BODILY INJURY, DAMAGE TO PROPERTY, POLLUTION AND LOSS OF PRODUCT.

BS&B Pressure Safety Management, L.L.C. supply BPRV's selected by their customers, which are manufactured in reliance upon information and specifications supplied by the customer. BS&B Pressure Safety Management, L.L.C. is not liable for any damage resulting from improper installation, improper system design, unsafe venting, or other factors beyond BS&B Pressure Safety Management, L.L.C. control.

BS₅B®	SPECIAL EN	GINEERING II	NSTRUC	TIONS
	CHK'D. BY G. Klein	DATE 07/05/05	SHEET	2 OF 17
BS&B SAFETY SYSTEMS, L.L.C.	APP. BY D. Ibbetson	REVISION N	RELEASE NO.	12-T-0607
REV.: S ECN NO	D.: 17-T-0367 DRAWN: ^K	unoraref. CHK'D .:	CEB DATE:	22-Sep-17

SAFETY PRECAUTIONS:

- **Caution**: Provide adequate support for the piping and the connections to absorb recoil/reaction forces when the BPRV opens. If the discharge is free vented, a baffle plate may be mounted downstream of the outlet companion pipe flange with extra length studs to minimize recoil.
- **Caution:** The BPRV valve should not be subjected to bending stresses such as those developed by misaligned piping, unsupported piping or improper torque application to companion flanges. Mating flanges faces shall be parallel to BPRV flanges.
- **Caution:** Do not locate the BPRV where it may be subjected to thermal shock. Review any concerns with BS&B Safety Management, L.L.C. before installation.
- **Caution:** Corrosion and process conditions may cause deterioration and necessitate periodic inspection and/or replacement of component parts.
- **Caution:** When the BPRV opens, a pressure shock wave is generated. Take account of the affect this may have on the operating performance of downstream and upstream equipment.
- **Caution:** When the BPRV opens, the rotating disc will extend beyond the body on both the inlet & outlet sides. Make sure that the disc cannot contact upstream or downstream components; this will affect the opening of the BPRV. Make sure that the fully opened disk does not project into an adjacent flow path that will load the disc and risk damage of the BPRV.
- **Caution:** Each BPRV is designed and tested for use in a specific orientation such as vertical flow down, vertical flow up, horizontal flow with valve opening bottom up or horizontal flow with the valve opening top down. Install your BPRV in this orientation. Consult BS&B before changing orientation; retesting by BS&B is probably required. Test certificates and "Code Stamping" is void when a BPRV is applied in the wrong orientation.
- **Warning:** Do not locate the BPRV where personnel will be exposed to released product and pressure through the BPRV.

BEFORE YOU INSTALL THE BPRV VALVE

Handling Instructions

- 1. Never lift or move the valve assembly using the plug, valve seat (bore), or shafts as lifting points.
- 2. Never lift or move the valve assembly by using the mechanism, sensor, or other attached accessories.
- **3.** Valve should be handled gently and any rough handling of the valve should be avoided which could disturb the Mechanism settings.

RS ₈ R°		AL ENGIN	IEE	RING II				5
	CHK'D BY G. KI	ein	DATE	07/05/05	SHEET	3	OF	17
BS&B SAFETY SYSTEMS, LL.C.	APP. BY D. Ibb	etson	REVIS	ON <u>N</u>	RELEAS	E NO. <u>12</u>	2-T-0607	
REV.: S ECN NO.:	: 17-T-0367	DRAWN: Kunarane	L	CHK'D.:	ŒB	DATE:	22-Sep	-17

Lifting Instructions

- 1. Shoulderless eye bolts should be used only where the hoist chain or sling is aligned with the axis of the bolt, so that it pulls in exactly the same direction as the shaft of the bolt. The bolt must be fully screwed into the valve body. If the chain or sling pulls at an angle to the axis of the eye bolt, the bolt may snap. It is recommended that forged steel material be used for eye bolts.
- 2. Shouldered eye bolts must be used whenever the chain or sling is rigged at an angle from the axis of the bolt. The eye bolt must be screwed into the valve body until the shoulder fits flat and tight against the surface of the counter bore in valve body. To make sure the eye bolt will not be bent sideways, the chain of sling must be in the plane of the eye of the eyebolt. To ensure that the shoulder is firmly seated on the surface of the load when the eye has been correctly aligned with the chain of sling, a metal washer of suitable size and shape may be used under the shoulder. The depth of thread engagement must be at least 1.5 times the diameter of the eye bolt shaft. It is recommended that forged steel material be used for eye bolts.
- **3.** In any situation where there is doubt about the safety of using eye bolts, it is recommended that swivel hoist rings be used instead of eye bolts. Follow manufacturing recommendations in selecting and using these rings.
- 4. Never over-torque a lifting device. Never use a lifting device that has bad threads. Never use a lifting device that is corroded, cracked, bent, twisted, stretched, fatigued, undersized, or questionable.
- 5. Valves shall always be lifted vertically up using the recommended eye bolts shown in the approval drawings.
- 6. While lifting the valve use a single lift point with 2 straps or 2 chains that are equal in length. See Fig 1 strap A is equal in length to strap B. The length of straps need to be long enough so θ is greater than 50°. COG details are given on the approval drawings.
- **7.** Any slings, chains, lifting beams, spreaders or other necessary equipment shall be certified to lift the equipment weight plus a margin of 50%.
- 8. It is recommended that lifting straps be used thru the eye bolts or chains with hooks with safety latches.
- 9. Some of Dos and Don'ts for lifting the valve assembly are shown in figures 1 thru 4.
- **10.** Angle of lift (θ) should be 50° or more.

BS₅	R	SPI DRAWN BY	ECI/ MA	AL ENGI	NEE	RING	g in	ISTR	UCT	10NS	5
		CHK'D. BY	G. Kle	ein	DATE	07/05	5/05	SHEET	4	OF	17
BS&B SAFETY SYSTE	MS, L.L.C.	APP. BY	D. Ibbe	etson	REVIS		Ν	RELEAS	E NO. <u>1</u>	2-T-0607	,
REV.: S	ECN NO	.: 17-T	-0367	DRAWN: Kunaran	Ļ	CHK'D.:	(ĽB	DATE:	22-Sep	-17

Recommended Lifting method for smaller size valves.



Figure 1: DO'S for BPRV (Typ)

Note: Smaller valves where Center of Gravity (COG) is considerably off center due to mechanism weight and extended spindle shafts for cryo valves.

BS₅	e e e e e e e e e e e e e e e e e e e	SPI DRAWN BY		AL ENGI	NEE	RING II			10NS	5
		CHK'D. BY	G. Kl	ein	DATE	07/05/05	SHEET	5	OF	17
BS&B SAFETY SYSTE	MS, L.L.C.	APP. BY	D. Ibb	etson	REVISI	on <u>N</u>	RELEAS	E NO. <u>1</u>	2-T-0607	7
REV.: S	ECN NC).: 17-T	-0367	DRAWN: Kunar	aref	CHK'D.:	ŒB	DATE:	22-Sep	o-17



Figure 2: DONT'S for BPRV (Typ)

Note: Mechanism or Sensor MUST NOT be strapped for lifting Valves.

CHK'D. BY G. Klein DATE 07/05/05 SHEET 6 0F 17 BS&B SAFETY SYSTEMS, LLC. APP. BY D. Ibbetson REVISION N RELEASE NO. 12-T-0607 REV.: S ECN NO : 17-T-0367 DRAWN: Kurwanda CHK'D : MB DATE: 22-Sep-17	₿S ₅	®	SPI DRAWN BY		AL ENGIN	NEE	RING	g in				6
BS&B SAFETY SYSTEMS, LLC. APP. BY D. Ibbetson REVISION N RELEASE NO. 12-T-0607 REV.: S ECN NO : 17-T-0367 DRAWN: Kurward CHK'D : CHK'D : 22-Sep-17							07/04	5/05		6	05	17
BS&B SAFETY SYSTEMS, LLC. APP. BY D. Ibbetson REVISION N RELEASE NO. 12-T-0607			CHK D. BY	G. Ni		DATE	07/00	5/05	SHEET	0	OF	17
REV: S ECN NO: 17-T-0367 DRAWN: Kummand CHK'D: PB DATE: 22-Sep-17	BS&B SAFETY SYSTE	MS, L.L.C.	APP. BY	D. Ibb	etson	REVISI	ON	Ν	RELEAS	e no. <u>1</u> 2	2-T-0607	,
	REV.: S	ECN NO.	: 17-T	-0367	DRAWN: Kumarar	Ļ	CHK'D.:	(EB	DATE:	22-Sep	-17

Recommended Lifting method for Bigger size valves





Note: Larger valves where COG is closer to the center of the valve due to the heavy weight of the valve body that offsets mechanism weight.

BS₅	R	SPI DRAWN BY		AL ENGIN	NEE	RING	6 IN			; TI (R-000		5
		CHK'D. BY	G. Kle	ein	DATE	07/05	/05	SHEET		7	OF	17
BS&B SAFETY SYSTE	MS, L.L.C.	APP. BY	D. Ibbe	etson	REVIS		N	RELEAS	E NO.	12-	T-0607	,
REV.: S	ECN NO.	.: 17-T	-0367	DRAWN: Kunaran	Ļ	CHK'D.:	(ĽB	DATE	:	22-Sep	-17



Figure 4: DONT'S for BPRV (Typ)

Inspect the BPRV Valve

- 1. Inspect the BPRV valve mating surfaces for foreign materials. Dirt or grit can cause the companion flange gaskets to not seal properly and leak.
- 2. Inspect the mechanism for physical damage. Damage to the mechanism could cause the valve to open at a pressure other than the rated pressure.
- 3. The BPRV valve size and rating must match the size and rating of the companion flange.
- 4. If the BPRV has a rust preventative applied, clean with an appropriate solvent, such as MEK.
- 5. The BPRV valve must not be machined or modified in any way except with the approval of BS&B Pressure Safety Management, L.L.C. Failure to obtain such approval voids the warranty on this product.

Check the installation conditions for the BPRV Valve

- 1. Ensure that the flow path orientation of the installation matches that for which the BPRV was calibrated.
- 2. Ensure that the BPRV rotating disc is protected within the BPRV body in the fully closed position.
- **3.** Ensure that the BPRV rotating disk cannot contact upstream or downstream components when in the fully open position.

BS₅	B	SPI DRAWN BY	ECI/ MA	AL ENGI	NEE	RING	g in			FION	S
		CHK'D. BY	G. Kle	ein	DATE	07/05	5/05	SHEET	8	OF	17
BS&B SAFETY SYSTE	MS, L.L.C.	APP. BY	D. Ibbe	etson	REVIS		Ν	RELEAS	E NO.	12-T-060	7
REV.: S	ECN NO	.: 17-T	-0367	DRAWN: Kunaha	r.	CHK'D.:	(ĽB	DATE:	22-Se	o-17

BPRV INSTALLATION IN COMPANION FLANGE



Figure 5. Typical Installation

NOTE: Figure 5 illustrates a "Vertical Flow Path" and a "Horizontal Flow Path" respectively.

BS₅E	[®] SP DRAWN BY	ECIAL E	NGINEEI	RING II				5
	CHK'D. BY	G. Klein	DATE	07/05/05	SHEET	9	OF	17
BS&B SAFETY SYSTEMS,	LLC. APP. BY	D. Ibbetson	REVISIO	ON <u>N</u>	_ RELEAS	e no. <u>1</u> 2	2-T-0607	
REV.: S EC	CN NO.: 17-T	-0367 DRAWN	1: Kunararef.	CHK'D.:	ŒB	DATE:	22-Sep-	-17

BPRV Installation Procedure Between Companion Flanges

- 1. Place the BPRV valve body in between companion flanges as shown in Figure 5. Make certain that the flow arrow on the body and the orientation arrow in the mechanism are correctly orientated as shown in Figure 5.
- 2. Install the companion flange gaskets. Ensure gaskets that meet the required BS&B installation torque values shown in Table 1 for compressed fiber, for Flexitallic® "Type LS" or Flexitallic® "Type CGI", Table 2 for RTJ type gaskets are used. Other gasket types or those that require different companion flange stud torque values must be approved by BS&B before use.
- **3.** Install the studs with nuts. Tighten all nuts finger-tight before torqueing. Even torque can be achieved by applying the torque in 1/4 increments of the desired final torque. The torque shall be applied in a criss-cross pattern.
 - a. **Compressed Fiber Gaskets** Evenly torque the studs to the value listed in Table 1, using a calibrated torque wrench.
 - b. Flexitallic® Type "LS" Gasket Only Evenly torque the studs following the Flexitallic® installation instructions to the value listed in Table 1 using a calibrated torque wrench. Should the torque value in Table 1 differ from that recommended by Flexitallic®, consult BS&B before proceeding with installation.
 - c. Flexitallic_® Type "CGI" Gasket Only Only to be used on Flanged Seal Retainer Ring applications. Evenly torque the studs following the Flexitallic_® installation instructions to the value listed in Table 1 using a calibrated torque wrench. Should the torque value in Table 1 differ from that recommended by Flexitallic_®, consult BS&B before proceeding with installation.
 - d. Klinger_® Type "RTJ" Gasket Only Only to be used on RTJ type Flanges. Evenly torque the studs following the Klinger_® installation instructions to the value listed in Table 2 using a calibrated torque wrench. Should the torque value in Table 2 differ from that recommended by Klinger_®, consult BS&B before proceeding with installation.
- 4. Remove shipping pin and install Calibrated Buckling Pin per Pin Installation Instruction received with valve.

BS₅	e	SPI DRAWN BY	ECIA MA	AL ENGI	NEE	RIN	g in			10NS	5
		CHK'D. BY	G. Kle	ein	DATE	07/0	5/05	SHEET	10	OF	17
BS&B SAFETY SYSTE	MS, L.L.C.	APP. BY	D. Ibbe	etson	REVIS		Ν	RELEAS	e no. <u>1</u>	2-T-0607	7
REV.: S	ECN NO	.: 17-T	-0367	DRAWN: Kunarar	eL.	CHK'D.:	(ĽB	DATE:	22-Sep	o-17

TABLE 1: BPRV VALVE COMPANION FLANGE TORQUE

Valve	e Size	Flange	Rating	Number of Studs	Diam. Of Studs	Flexitall Stud (Flang Retainer R	ic ® CGI Forque ed Seal ings ONLY)	Flexitallic ® "LS Stud Torque ft-lbs N-m		Compres Stud	ssed Fiber Torque
in	mm	ANSI	Series		in	ft-lbs	N-m	ft-lbs	N-m	ft-lbs	N-m
		150		4	.625	90	122	50	68	51	69
2	50	300		8	.625	90	122	50	68	52	70
2	50	600	-	8	.625	90	122	50	68	76	103
		900		8	.875	240	325	133	180	248	336
		150		4	.625	90	122	50	68	60	82
3	125	300	_	8	.75	150	203	83	112	95	129
5	125	600	_	8	.75	150	203	83	112	142	192
		900		8	.875	240	325	133	180	305	414
		150		8	.625	90	122	50	68	51	70
Λ	100	300		8	.75	150	203	83	112	112	152
-	100	600		8	.875	240	325	133	180	249	338
		900		8	1.125	533	722	296	400	561	761
		150	-	8	.75	150	203	83	112	85	115
6	150	300		12	.75	150	203	83	112	120	162
Ŭ	100	600	_	12	1	368	498	204	276	335	454
		900		12	1.125	533	722	296	400	589	798
		150	_	8	.75	150	203	83	112	97	132
8	200	300		12	.875	240	325	133	180	191	259
Ŭ	200	600	_	12	1.125	533	722	296	400	494	670
		900		12	1.375	1,020	1,383	567	769	1,054	1,429
		150		12	.875	240	325	133	180	127	173
10	250	300		16	1	368	498	204	276	240	325
		600	-	16	1.25	750	1,017	417	565	630	854
		900		16	1.375	1,020	1,383	567	769	1,105	1,498
		150	_	12	.875	240	325	133	180	145	197
12	300	300		16	1.125	533	722	296	400	351	475
		600		20	1.25	750	1,017	417	565	623	845
		900		20	1.375	1,020	1,383	567	769	1,179	1,598
		150		12	1	368	498	204	276	206	280
14	350	300		20	1.125	533	122	296	400	361	490
		600	-	20	1.375	1,020	1,383	567	769	801	1,086
		900		20	1.5	1,200	1,627	204	732	1,550	2,102
		200		20	1.25	300	490	204	270	200	212
16	400	600		20	1.25	1 200	1,017	4 17 540	722	400	1 494
		000		20	1.5	1,200	1,027	722	004	1,095	1,404
		150		16	1 1 2 5	522	722	206	<u> </u>	272	370
		300	1	2/	1.125	750	1 017	<u>∠</u> 30 <u>⊿</u> 17	565	<u></u> 	652
18	450	600	-	29	1.625	1 650	2 237	733	994	1,367	1 853
		900	1	20	1.875	3,000	4 067	1 333	1 807	2 813	3 814
	1	000	1	20	1.070	0,000	1,007	1,000	1,007	2,010	5,017
		150		20	1,125	533	722	296	400	268	363
		300	1	24	1.25	750	1.017	417	565	519	704
20	500	600	1 -	24	1.625	1.650	2.237	733	994	1.374	1.862
		900	1	20	2	3,300	4,474	1,467	1,989	3,370	4,568

RS _z R [®]		GINEERING IN		
	DRAWN BY IVIAIVI		NO.	11-1VIR-0002
	CHK'D. BY G. Klein	DATE 07/05/05	SHEET	<u>11</u> OF <u>17</u>
BS&B SAFETY SYSTEMS, L.L.C.	APP. BY D. Ibbetson	REVISION N	_ RELEAS	E NO. <u>12-T-0607</u>
REV.: S ECN	NO.: 17-T-0367 DRAWN: Ku	mararef. CHK'D.:	ŒB	DATE: 22-Sep-17

Valve	e Size	Flange	Rating	Number of Studs	Diam. Of Studs	Flexitall Stud 1 (Flang Retainer R	ic ® CGI Гогque ed Seal ings ONLY)	Flexitallio Stud T	c ® "LS" orque	Compres Stud	ssed Fiber Torque
in	mm	ANSI	Series		in	ft-lbs	N-m	ft-lbs	N-m	ft-lbs	N-m
		150		20	1.25	750	1,017	417	565	379	514
		300		24	1.5	1,200	1,627	540	732	883	1,197
24	600	600	-	24	1.875	3,000	4,067	1,333	1,807	2,070	2,806
		900		20	2.5	6,600	8,948	2,933	3,977	6,080	8,244
			Α	24	1.25	750	1,017	417	565	373	506
		150	В	36	.75	150	203	83	112	91	123
		000	Α	28	1.625	1,650	2,237	733	994	1,038	1,407
	050	300	В	32	1.25	750	1,017	417	565	495	671
26	650	000	Α	28	1.875	3,000	4,067	1,333	1,807	2,091	2,835
		600	В	28	1.625	1,650	2,237	733	994	1,279	1,734
		000	Α	20	2.75	8,880	12,040	3,947	5,351	6,846	9,281
		900	В	20	2.5	6,600	8,948	2,933	3,977	5,294	7,178
		450	Α	28	1.25	750	1,017	417	565	369	500
		150	В	40	.75	150	203	83	112	91	123
			Α	28	1.625	1,650	2,237	733	994	1,082	1,467
		300	В	36	1.25	750	1,017	417	565	494	669
28	700		Α	28	2	3,300	4,474	1,467	1,989	2,477	3,359
		600	В	28	1.75	2,250	3,051	1,000	1,356	1,604	2,175
			Α	20	3	11,580	15,700	5,147	6,978	8,668	11,753
		900	В	20	2.75	8,880	12,040	3,947	5,351	6,837	9,270
		450	Α	28	1.25	750	1,017	417	565	381	517
		150	В	44	.75	150	203	83	112	91	124
		000	Α	28	1.75	2,250	3,051	1,000	1,356	1,354	1,836
00	750	300	В	36	1.375	1,020	1,383	567	769	645	875
30	750	000	Α	28	2	3,300	4,474	1,467	1,989	2,626	3,561
		600	В	28	1.875	3,000	4,067	1,333	1,807	1,976	2,679
		000	Α	20	3	11,580	15,700	5,147	6,978	9,229	12,512
		900	В	20	3	11,580	15,700	5,147	6,978	8,580	11,633
		150	А	28	1.5	1,200	1,627	540	732	626	849
		150	В	48	.75	150	203	83	112	93	125
		200	Α	28	1.875	3,000	4,067	1,333	1,807	1,641	2,225
22	800	300	В	32	1.5	1,200	1,627	540	732	865	1,173
52	000	600	Α	28	2.25	4,770	6,467	2,120	2,874	3,453	4,682
		000	В	28	2	3,300	4,474	1,467	1,989	2,374	3,219
		900	A	20	3.25	15,000	20,337	6,667	9,039	11,420	15,483
		300	В	20	3	11,580	15,700	5,147	6,978	9,054	12,276
		150	A	32	1.5	1,200	1,627	540	732	617	837
		100	В	40	.875	240	325	133	180	147	199
		300	A	28	1.875	3,000	4,067	1,333	1,807	1,699	2,303
34	850	000	В	36	1.5	1,200	1,627	540	732	856	1,160
57	000	600	A	28	2.25	4,770	6,467	2,120	2,874	3,601	4,882
		000	В	24	2.25	4,770	6,467	2,120	2,874	3,495	4,739
		900	Α	20	3.5	18,750	25,422	8,333	11,299	13,943	18,904
		300	В	20	3.25	15,000	20,337	6,667	9,039	11,129	15,090
36	900	150	Α	32	1.5	1,200	1,627	540	732	636	862

RS _R ®	SPECIAL ENG		ISTR	UCTIONS
	DRAWN BY MAM		NO	II-MR-0002
	CHK'D. BY G. Klein	DATE 07/05/05	SHEET	<u>12</u> OF <u>17</u>
BS&B SAFETY SYSTEMS, LLC.	APP. BY D. Ibbetson	REVISION N	_ RELEASE	ENO. <u>12-T-0607</u>
REV.: S ECN NO	0.: 17-T-0367 DRAWN: Kuna	raref. CHK'D.:	ŒB	DATE: 22-Sep-17

Valve	e Size	Flange	Rating	Number of Studs	Diam. Of Studs	Flexitall Stud 1 (Flang Retainer R	lic ® CGI Forque ed Seal ings ONLY)	Flexitallio Stud T	c®"LS" orque	Compres Stud	ssed Fiber Torque
in	mm	ANSI	Series		in	ft-lbs	N-m	ft-lbs	N-m	ft-lbs	N-m
			В	44	.875	240	325	133	180	147	199
		200	Α	32	2	3,300	4,474	1,467	1,989	1,930	2,616
		300	В	32	1.625	1,650	2,237	733	994	1,104	1,497
		000	Α	28	2.5	6,600	8,948	2,933	3,977	4,660	6,318
		600	В	28	2.25	4,770	6,467	2,120	2,874	3,364	4,561
		000	Α	20	3.5	18,750	25,422	8,333	11,299	14,697	19,926
		900	В	24	3	11,580	15,700	5,147	6,978	8,971	12,164
		150	Α	32	1.5	1,200	1,627	540	732	659	894
		150	В	40	1	368	498	204	276	213	289
20	050	200	Α	32	1.5	1,200	1,627	540	732	921	1,249
30	950	300	В	36	1.625	1,650	2,237	733	994	1,103	1,495
		600	А	28	2.25	4,770	6,467	2,120	2,874	3,538	4,797
		900	Α	20	3.5	18,750	25,422	8,333	11,299	14,363	19,474
		150	А	36	1.5	1,200	1,627	540	732	614	833
		150	В	44	1	368	498	204	276	212	287
40	1000	200	Α	32	1.625	1,650	2,237	733	994	1,152	1,562
40	1000	300	В	40	1.625	1,650	2,237	733	994	1,085	1,471
		600	А	32	2.25	4,770	6,467	2,120	2,874	3,426	4,644
		900	Α	24	3.5	18,750	25,422	8,333	11,299	13,487	18,287
		150	Α	36	1.5	1,200	1,627	540	732	633	858
		150	В	48	1	368	498	204	276	211	286
12	1050	300	Α	32	1.625	1,650	2,237	733	994	1,196	1,621
42	1030	500	В	36	1.75	2,250	3,051	1,000	1,356	1,385	1,878
		600	Α	28	2.5	6,600	8,948	2,933	3,977	4,796	6,502
		900	Α	24	3.5	18,750	25,422	8,333	11,299	13,956	18,922
		150	A	40	1.5	1,200	1,627	540	732	628	851
		100	В	52	1	368	498	204	276	210	285
44	1100	300	A	32	1.75	2,250	3,051	1,000	1,356	1,454	1,971
	1100		В	40	1.75	2,250	3,051	1,000	1,356	1,361	1,846
		600	A	32	2.5	6,600	8,948	2,933	3,977	4,632	6,280
		900	A	24	3.75	23,100	31,319	10,267	13,920	16,801	22,779
					. –						
		150	A	40	1.5	1,200	1,627	540	732	643	872
			B	40	1.125	533	722	296	400	323	438
46	1150	300	A	28	1.875	3,000	4,067	1,333	1,807	1,870	2,535
			B	36	1.875	3,000	4,067	1,333	1,807	1,747	2,369
		600	A	32	2.5	6,600	8,948	2,933	3,977	4,832	6,552
		900	A	24	4	28,136	38,148	12,505	16,955	20,024	27,148
		150	A	44	1.5	1,200	1,627	540	732	638	865
			B	44	1.125	533	722	296	400	319	433
48	1200	300	A	32	1.875	3,000	4,067	1,333	1,807	1,807	2,450
-			B	40	1.875	3,000	4,067	1,333	1,807	1,/11	2,319
		600	A	32	2.75	8,880	12,040	3,947	5,351	6,143	8,329
		900	A	24	4	28,136	38,148	12,505	16,955	20,625	27,964
50	1250	150		44	1./5	2,250	3,051	1,000	1,356	1,012	1,3/3
			В	48	1.125	533	722	296	400	316	428

B	Ss.	e e e e e e e e e e e e e e e e e e e	SPI DRAWN BY		AL ENGIN	NEE	RIN	g in		UCT	10NS	5
			CHK'D. BY	G. Kle	ein	DATE	07/0	5/05	SHEET	13	B OF	17
BS&B SAF	ETY SYSTI	MS, L.L.C.	APP. BY	D. Ibbe	etson	REVIS	ION	Ν	RELEAS	E NO.	12-T-0607	7
REV.:	S	ECN NO	o.: 17-T	-0367	DRAWN: Kunaran	L.	CHK'D.:	(JEB	DATE:	22-Sep	o-17

						Flexital	ic ® CGI				
Valve	Size	Flange	Rating	Number	Diam. Of	Stud 1	Forque	Flexitalli	c ® "LS"	Compres	ssed Fiber
Valve	UILC	riange	Rating	of Studs	Studs	(Flang	ed Seal	Stud T	orque	Stud	Torque
				of oldus		Retainer R	ings ONLY)				
in	mm	ANSI	Series		in	ft-lbs	N-m	ft-lbs	N-m	ft-lbs	N-m
		300	A	32	2	3,300	4,474	1,467	1,989	2,145	2,908
			В	44	1.875	3,000	4,067	1,333	1,807	1,683	2,282
		600	A	28	3	11,580	15,700	5,147	6,978	8,149	11,048
		150	A	44	1.75	2,250	3,051	1,000	1,356	1,034	1,402
			В	52	1.125	533	722	296	400	313	425
52	1300	300	A	32	2	3,300	4,474	1,467	1,989	2,211	2,998
		300	В	48	1.875	3,000	4,067	1,333	1,807	1,662	2,253
		600	Α	32	3	11,580	15,700	5,147	6,978	7,842	10,632
		150	Α	44	1.75	2,250	3,051	1,000	1,356	1,056	1,431
		150	В	56	1.125	533	722	296	400	313	425
54	1350	200	Α	28	2.25	4,770	6,467	2,120	2,874	3,159	4,283
		300	В	48	1.875	3,000	4,067	1,333	1,807	1,767	2,396
		600	Α	32	3	11,580	15,700	5,147	6,978	8,114	11,002
		150	Α	48	1.75	2,250	3,051	1,000	1,356	1,050	1,423
		150	В	60	1.125	533	722	296	400	312	423
56	1400	200	Α	28	2.25	4,770	6,467	2,120	2,874	3,253	4,411
		300	В	36	2.25	4,770	6,467	2,120	2,874	3,034	4,113
		600	Α	32	3.25	15,000	20,337	6,667	9,039	9,887	13,406
		450	Α	48	1.75	2,250	3,051	1,000	1,356	1,071	1,452
		150	В	48	1.25	750	1,017	417	565	452	612
58	1450	000	Α	32	2.25	4,770	6,467	2,120	2,874	3,130	4,244
		300	В	40	2.25	4,770	6,467	2,120	2,874	3,034	4,113
		600	Α	32	3.25	15,000	20,337	6,667	9,039	10,146	13,756
		450	Α	52	1.75	2,250	3,051	1,000	1,356	1,061	1,439
		150	В	52	1.25	750	1,017	417	565	446	605
60	1500	000	Α	32	2.25	4,770	6,467	2,120	2,874	3,215	4,359
		300	В	40	2.25	4,770	6,467	2,120	2,874	3,057	4,145
		600	Α	28	3.5	18,750	25,422	8,333	11,299	13,024	17,658
64	1600	-	-	64	1.25	750	1,017	417	565	-	-
74	1850	-	-	64	1.25	750	1,017	417	565	-	-

TABLE 2: BPRV VALVE COMPANION FLANGE TORQUEBolt Materials: ASTM A193 B7, B16 & ASTM A320 L7

Valve	e Size	Flange	Rating	Number of Studs	Diam. Of Studs	Klinge Gaske	r _® Type "RTJ" et stud Torque
in	mm	ANSI	Series		in	ft-lbs	N-m
		150		4	.625	85	116
2	50	300		8	.625	85	116
2	50	600	-	8	.625	95	130
		900		8	.875	239	325

BS₅	®	SPI		AL ENGII	NEE	RING				5
		DRAWNDI					NO.		02	
		CHK'D. BY	G. Kle	ein	DATE	07/05/0	05 SHEET	14	OF	17
BS&B SAFETY SYSTEN	IS, L.L.C .	APP. BY	D. Ibb	etson	_ REVIS	ION <u></u>	N RELEAS	SE NO. <u>1</u> 2	2-T-0607	7
REV.: S	ECN NO	.: 17-T	-0367	DRAWN: Kunara	ref.	CHK'D.:	ŒB	DATE:	22-Sep	o-17

Valv	e Size	Flange	Rating	Number of Studs	Diam. Of Studs	Klinge Gaske	er⊛ Type "RTJ" et stud Torque
in	mm	ANSI	Series		in	ft-lbs	N-m
		150		4	.625	85	116
0	4.05	300		8	.75	149	203
3	125	600	1 -	8	.75	168	229
		900		8	.875	269	366
		150		8	.625	85	116
	400	300		8	.75	149	203
4	100	600	-	8	.875	269	366
		900		8	1.125	587	797
-		150		8	.75	149	203
		300		12	.75	168	229
6	150	600	-	12	1	401	545
		900		12	1.125	587	797
		150		8	.75	149	203
		300		12	.875	269	366
8	200	600	-	12	1.125	587	797
		900		12	1.375	1114	1511
		150		12	.875	239	325
		300		16	1	357	485
10	250	600	-	16	1.25	823	1116
		900		16	1.375	1114	1511
		150		12	.875	239	325
		300		16	1.125	522	708
12	300	600	-	20	1.25	823	1116
		900		20	1.375	1114	1511
		150		12	1	357	485
		300		20	1.125	522	708
14	350	600	-	20	1.375	1114	1511
		900		20	1.5	1629	2209
		150		16	1	357	485
10	100	300		20	1.25	731	992
16	400	600	-	20	1.5	1466	1988
		900		20	1.625	2093	2839
		150		16	1.125	522	708
4.0	150	300		24	1.25	731	992
18	450	600	- 1	20	1.625	1884	2555
		900		20	1.875	3277	4444
		150		20	1.125	522	708
		300	1	24	1.25	823	1116
20	500	600	1 -	24	1.625	1884	2555
		900	1	20	2	4004	5430
	1	150		20	1.25	731	992
		300	1	24	1.5	1466	1988
24	600	600	1 -	24	1.875	2950	4000
		900	1	20	2.5	7175	9728

RS ₈	®	SPI		AL ENGI	NEE	RING				5
		DRAWNBY		IVI			NO.		J02	
		CHK'D. BY	G. Kle	ein	DATE	07/05/	05 SHEET	15	OF	17
BS&B SAFETY SYSTE	MS, L.L.C.	APP. BY	D. Ibbe	etson	_ REVIS		N RELEAS	SE NO. <u>1</u>	2-T-0607	7
rev.: S	ECN NO	.: 17-T	-0367	DRAWN: Kunara	ref.	CHK'D.:	ŒB	DATE:	22-Sep	o-17

Torque values are based on the use of gaskets shown. Consult BS&B Pressure Safety Management, L.L.C. for flanges in other materials when suppliers recommend torque values higher than the BS&B Pressure Safety Management, L.L.C. recommended torque values and if gasket type differs from BS&B Pressure Safety Management, L.L.C. recommendation.

2" to 24" valve sizes are derived from ASME B16.5. Sizes 26" and above are derived from ASME B16.47.

Recommended CGI stud torques are based on a design stress of 45,000 psi. These torque values to be used with the flanged retainer ring design only. If the applied torques are to exceed 50,000 psi stud stress, contact BS&B Pressure Safety Management, L.L.C. for engineering verification.

Recommended LS stud torques are based on a design stress of 20,000 psi to 25,000 psi.

Recommended compressed fiber stud torques are derived from Klingersil® recommended gasket values for the ASME Section VIII Div 1, Mandatory Appendix 2 calculation.

Recommended RTJ stud torques are derived from Klingersil® recommended gasket values.

Guidelines for Flange Alignment for Valve Installation

Proper alignment of flange joint assembly is required for maximum seating surface contact, maximum opportunity for uniform gasket loading, and improves the effectiveness of all bolt tightening methods.

- 1. Out –of-tolerance conditions should be corrected before the Valve and the Gasket is installed to avoid damaging the gasket.
- 2. Proper alignment will result in the bolts passing through the flanges at right angles and the nuts resting against the flanges for proper tightening.
- **3.** The following are the tolerance guidelines for flange joint assembling per Standards ASME B31.3(335.2.5 for Flanged Joint Assembly) and ASME PCC-1(E-2.4).
- 4. Assuming no external alignment devices are used to achieve proper flange alignment, the flanges alignments must meet **a**. thru **d**. as specified in ASME PCC-1(E.2.4).
 - a. Centerline high/low (Reference: ASME PCC-1 (E-2.4) The alignment of the flanges shall be that the OD of the flanges are not misaligned more than 1/16" (.063") at any point. This shall be measured at four (4) locations around the flange OD. (see below figure).



	50	R				SINEE	RING				5
							07/05/		16	0 <u>2</u>	17
BS&B SAFET	TY SYSTE	MS, L.L.C.	APP. BY	D. Ibb	etson	REVIS	ION	<u>N</u> RELEAS	E NO. 12	 2-T-0607	7
									1		1
REV.:	S	ECN NO	.: 17-T	-0367	DRAWN: Kur	waref	CHK'D.:	ŒB	DATE:	22-Sep	o-17

b. Parallelism (Reference: ASME PCC-1 (E-2.4) – The alignment of the flanges shall be as shown in figure below to meet the requirements of PCC-1 (E-2.4). This maximum difference shall be achieved when applying a force, no greater than 10% of the maximum torque or bolt load for any bolt.

Maximum 0.8 mm $(\frac{1}{32}$ in difference between the	ı.)	
widest and narrowest		

c. Rotational two hole (Reference: ASME PCC-1 (E-2.4) – The alignment of the flanges is such that the bolt holes align have a maximum misalignment with each other as shown in figure below.



BS₅		®	SPI		AL ENGIN	NEE	RINO	g in				5
							07/0		NO.		02	47
			CHK'D. BY	G. KI	ein	DATE	07/0	5/05	SHEET	17	OF	17
BS&B SAFETY	SYSTE	MS, L.L.C.	APP. BY	D. Ibb	etson	REVIS		Ν	RELEAS	E NO. 12	2-T-0607	,
												1
REV.:	S	ECN NO	o.: 17-T	-0367	DRAWN: Kunaran	Ļ	CHK'D.:	(ÆB-	DATE:	22-Sep	-17

d. Excessive Spacing or Gap (Reference: ASME PCC-1 (E-2.4) – A condition where two flanges are separated by a distance greater than the two gasket thicknesses and will not come together when using less than 10% of the total target bolt torque or 20% of any single "target" bolt torque.

